



# uPAC-TOY1

## iPod and Auxiliary Input Interface with HD Radio Option for Toyota and Lexus AVC-LAN SAT Ready Radios



**The uPAC-TOY1 interface is a multi input media device compatible with SAT ready Toyota and Lexus AVC-LAN radios. The 2 inputs will support any of the following combinations: iPod/Auxiliary, iPod/HD Radio (HD Radio sold separately) or Auxiliary/HD Radio (HD Radio sold separately). The iPod input can be used as full control from the radio or full control from the iPod. The uPAC-TOY1 works with navigation and non-navigation radios. If a factory SAT tuner or DVD video system is present, it will continue to operate as well. The optional HD Radio tuner is part number uPAC-HDRT. Please visit [www.pac-audio.com](http://www.pac-audio.com) for a complete list of supported vehicles.**


### Configuring the uPAC-TOY1 (iPod and Auxiliary input as devices):

Before connecting the uPAC-TOY1 to the vehicle place all switches in the up (Off) position.

- Device 1 should be connected to the iPod cable.
- Device 2 should be connected to the auxiliary input cable.

If both the 3.5mm cable and RCA connections are used make sure to only have one of the 2 sources powered at a time.

Note: If the optional HD Radio Tuner is used, refer to the uPAC-HDRT's connection manual for configuration and operation instructions. The USB connection has no function at this time.

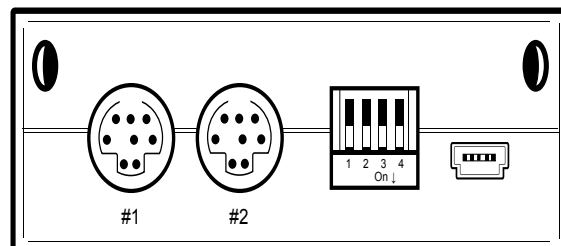


### Connecting to the vehicle:

**The factory installed radio must have a SAT or AM/SAT button.**

With the key off, plug the 12 pin harness provided with the uPAC-TOY1 into the radio. Plug the original 12 pin (if available) into the receptacle connector provided with the uPAC-TOY1. Make sure all other connectors are reconnected to the factory radio. Plug the 24 pin micro-fit cable into the uPAC-TOY1.

### Selecting the devices:

Press the **SAT or AM/SAT** button. Once in the mode select menu, turn the rotary tune knob to scroll through available sources (iPod, AUX1 or AUX2). To select the desired input press the **Preset 3** button. AUX1 is the iPod source while being controlled from the iPod. AUX2 is the RCA / 3.5mm cable which is connected to a DVD or MP3 player. Selecting iPod will enter a full text, full control iPod mode meaning the radio will control the iPod and display its text. Specific control instructions are on the back side of this sheet. To change from one selected device to another you must exit the device mode (select **FM** or **DISC**) and then select **SAT** or **AM/SAT** again. The mode select menu should now reappear.

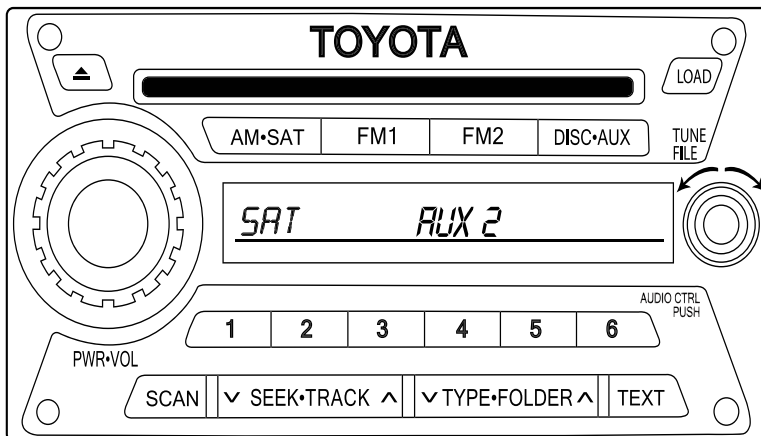

## Controlling the iPod:

- Next Track - turn the rotary tune knob to the right one notch or press **SEEK▲**.
- Prev. Track - turn the rotary tune knob to the left one notch or press **SEEK▼**.
- Fast Forward - press **Preset 2** repeatedly.
- Rewind - press **Preset 1** repeatedly.
- Random - press **Preset 5** to select off, single or album.

### Entering Browse Menu / Select

- Press the **Preset 3** to enter the Browse menu.
- Use the tune knob to scroll through the available options (see below).
- Press **Preset 3** to choose the displayed option.

### Exit Browse Menu / Folder Back


- Press **Preset 4** to move one step back in the Browse menu.
- Waiting several seconds will automatically exit the Browse menu.

### Changing the display

- Press the **TEXT** button to change between artist, song title and the play counter.


### Steering Wheel Controls

- ▲ - advance to the next track.
- ▼ - seek to the previous track.

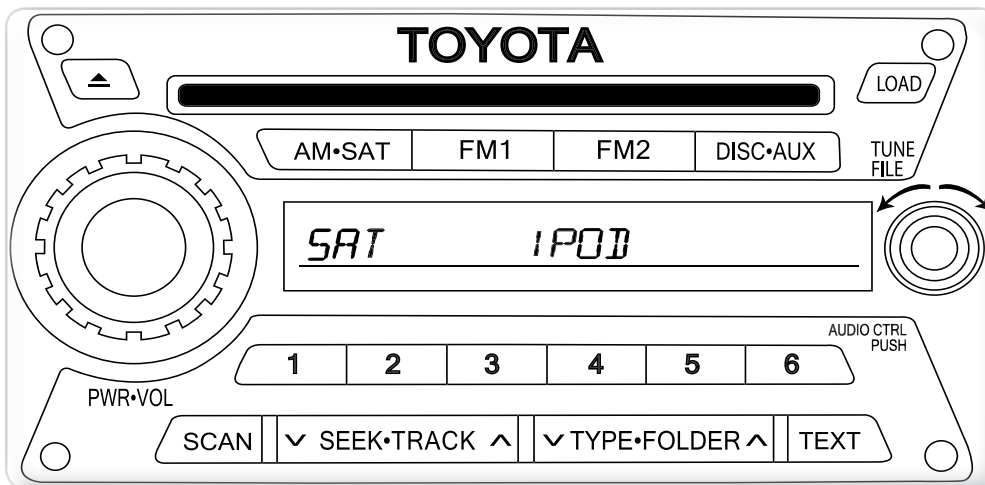

## Example of Operation (iPod full control):

- Enter iPod mode using the **SAT** or **AM/SAT** button (depending on radio).
- When iPod is displayed press **Preset 3**.
- Turn the tune knob until AR: Artist is displayed.
- Using the tune knob select an artist currently loaded on the iPod.
- Press **Preset 3** to select the displayed artist.
- Using the tune knob select an album by the previously selected artist.
- Press **Preset 3** to select the displayed album.
- Using the tune knob select a track from the previously selected album.
- Press **Preset 3** to select the displayed track to be played.
- The track will begin to play.
- You can select the next or previous track by using the tune knob, the **SEEK▲** or **SEEK▼** on the radio or by the steering wheel ▲ and ▼ buttons.

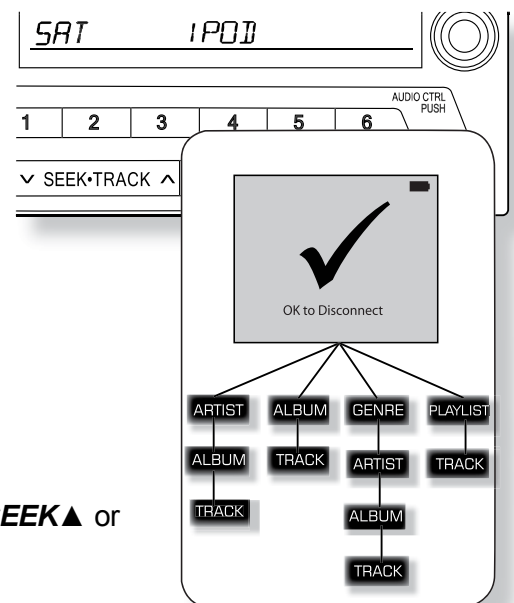

**DISCLAIMER:** Under no circumstances shall the manufacturer or the distributors of the uPAC-TOY1 be held liable for consequential damages sustained in connection with the uPAC-TOY1. The manufacture and its distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the uPAC-TOY1 other than its replacement.

Pacific Accessory Corporation - 1502 S. Santa Fe Street, Santa Ana, CA 92705