

PRODUCT FEATURES:

- Replaces factory trunk handle.
- Selectable Parking Guide Line ON or OFF.
- Maintains the OEM look.


PARTS INCLUDED:

1. Trunk handle camera
2. 20" extension cable



INSTALLATION INSTRUCTIONS:

1. Carefully remove the factory trunk handle using a plastic panel removal tool.
2. Run the camera cable to the inside of the cabin towards the radio.
3. Make the power and video connections to the RVC interface or the aftermarket radio.
4. Test the camera for functionality.
5. Snap in the new trunk handle.

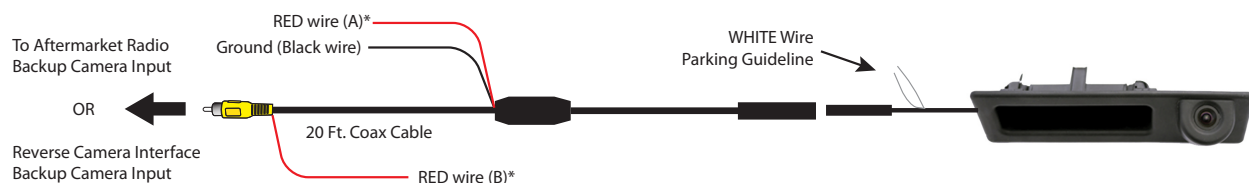

***NOTE:** To power the camera, use RED Wire A or B. If tapping power from the radio or RVC Interface, make sure to insulate RED Wire A to avoid it from shorting. If you will be tapping power from the reverse light +12V, insulate RED Wire B to avoid it from shorting. With either connection the Black GROUND wire needs to be connected to a solid chassis ground. For vehicles with manual transmission, we recommend tapping +12V power from the reverse light.

WHITE Wire: Connect to show parking guide line. Disconnect to remove. Insulate with tape to avoid from shorting.

Note: Cycle the camera power after connecting or disconnecting the control wire.

VEHICLE APPLICATIONS:

2012-2018	4 Series	2014-2017	X3
2012-2014	7 Series	2014-2018	X5
2016-2017	X1	2015-2017	X6

