

**Vehicle Applications**

**TOYOTA**

2012 - 2014	Camry	2012 - 2013	Tundra
2012 - 2013	Prius	2012 - 2014	Venza

**Parts Included**




TY-71 T-Harness



CUL-04 Camera

**Installation Diagram**

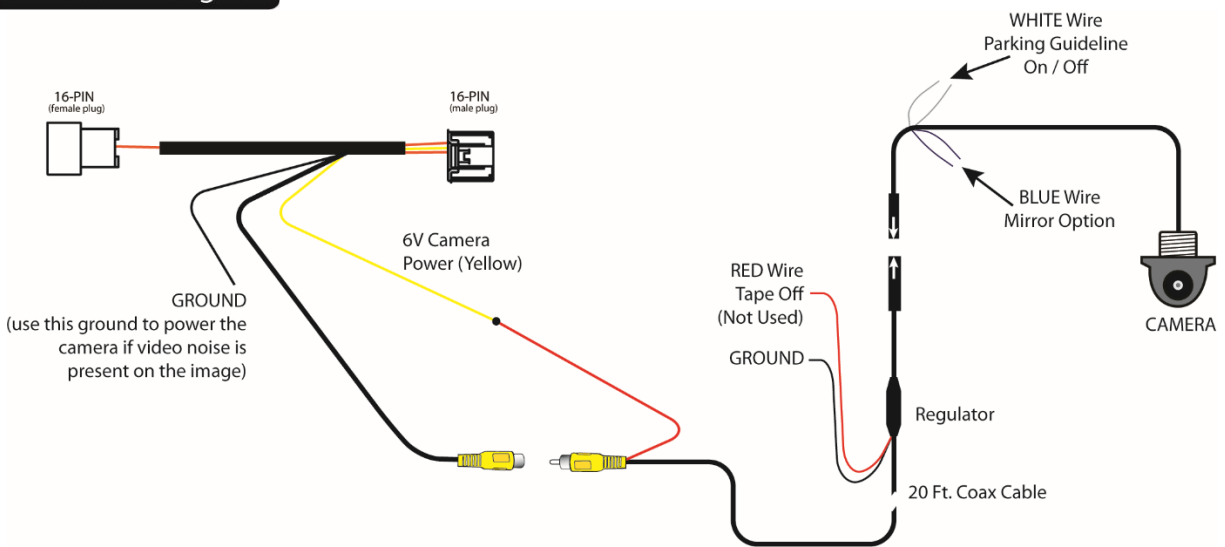

**INSTALLING THE CAMERA AND CABLE**

1. Open trunk and remove trunk door liner by removing the plastic snap rivets.
2. Remove lip panel where the camera will be mounted to.
3. Drill a hole at the center of the lip panel using the hole saw provided.
4. Attach the double-sided weather strip to the screw base of the camera prior to mounting and run the camera cable into the hole.
5. Insert the screw base through the cable and screw on the camera to the lip panel.
6. Mate the 4-pin male barrel connector of the camera cable to the extension cable.
7. Run extension cable towards the back of the factory radio.
8. Remove the factory radio from the dashboard and unplug the factory 16-Pin connector from the OEM radio.
9. Mate the Crux 16-Pin T-harness between the OE harness and radio then plug in the Yellow RCAs.
10. Test the camera, then re-install the radio into the dash.

