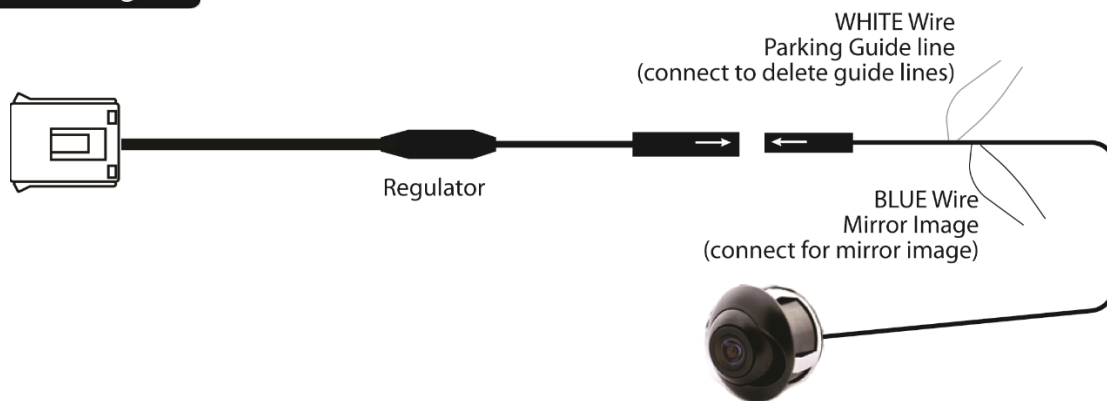


Product Features

- Plug and play connector for easy installation.
- Parking guide lines with On-Off feature.
- Mirror image capability for top mount or lip mount installation.
- Adjustable UP-DOWN camera lens angle.

Vehicle Applications**TOYOTA**

2012 – 2013 Tundra

Installation Diagram**INSTALLING THE CAMERA AND CABLE**

1. Remove the tailgate cover.
2. On the right side of the tailgate handle, drill a hole using the hole saw provided.
3. Route the camera cable through the hole and secure the camera to the handle.
4. Connect the 4-Pin plug to the provided factory plug underneath the truck (near the spare tire) as the cable is pre-ran for the camera from the factory.
5. Put the gear in reverse to test the camera.
6. Re-install the tailgate cover.

4-Pin Connector near
the spare tire



WIRING:

RED: +12V POWER

BLACK: GROUND

YELLOW RCA: VIDEO FEED

White thin wire on camera cable: guide line
delete (if present, connect together and insulate
to remove guide lines)

Blue thin wire on camera cable: Reverse
image (if present, connect together and insulate
for horizontal reverse image)

Sightline 

REAR-VIEW INTEGRATION

CRUX

RVCTY-71D



**FOR SELECT 2012-2013
TOYOTA TUNDRA**