



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
 www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

WP3-PN304A

Honda Pioneer 1000

4 Speaker Overhead WP System

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

PARTS LIST

- | | |
|------------------------|----------------------------------|
| 1. WP3-PN304A x 1 | 7. Enclosure Mounting Bracket x2 |
| 2. M6 Screw x12 | 8. J Mounting Brackets x 2 |
| 3. M6 Washers x16 | 9. J Bracket Rubber Insert x2 |
| 4. Lock Nuts x4 | 10. Fuse Holder with Fuse |
| 5. 30mm Hex bolts x2 | 11. Crimp on ring terminal |
| 6. Aluminium Spacer x2 | 12. Zip Ties |

TOOLS NEEDED FOR INSTALLATION

- | | |
|---------------------------|---------------------------|
| - 4mm Hex Key | - 10mm Socket and Ratchet |
| - #3 Philips Screw Driver | - Strippers and Crimpers |

PARTS LIST IMAGES



1. WP3-PN304A



2. M6 Screws x 12



3. M6 Washers x 16



4. Lock Nuts x4



5. 30mm Hex Bolts x2




6. Aluminium Spacer x2



7. Enclosure Mounting Brackets x 2



8. J Mounting Bracket

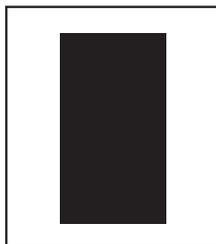

9. J Bracket Rubber Insert x2



10. Fuse Holder with Fuse



11. Crimp on ring terminal



12. Zip ties

INSTALLATION NOTES

To make wiring easier, locate the battery in the vehicle before beginning the installation. The use of a thread locker is recommended on all screws to prevent loosening due to vibration. If the vehicle has a roof, it will need to be removed prior to installation. Once the installation of the WP3-PN304A is complete the roof may be re-installed, modification to the roof may be required for proper fit.

Be sure to pre-install the J Bracket Rubber inserts before installing the WP3-PN304A





A. Loosely install the (2) mounting brackets onto the top of the enclosure using (8) Phillips Screws and (8) washers. Brackets are marked with a D (driver) or P (passenger) for correct orientation.



B. The enclosure brackets will utilize one safety net bolt on each side. Remove both with a 10mm socket.



C. Place the WP3-PN304A onto the cage with the (2) J style brackets resting on the front of the cage.



D. While holding the enclosure in position use the supplied 30mm hex bolt (1) aluminum spacer and factory washer to secure the PN304 bracket to the safety net bracket. Do not tighten it all the way. Repeat these steps on the opposing side.




E. Install both bottom J Brackets using (4) Phillips screws (8) Washers and (4) lock nuts. Be sure rubber inserts are pre-installed.

F. After all the hardware has been loosely installed, make sure the enclosure is seated properly then go back and tight on all the mounting hardware.

Run all necessary cabling to the battery.


WIRING INSTRUCTIONS

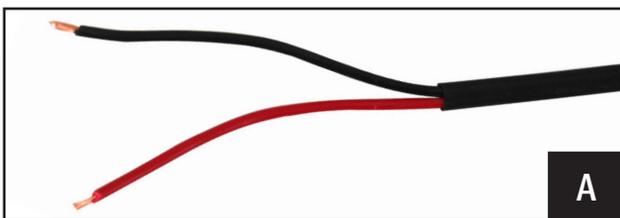

A. Cut the power/ground cable to length; be sure to leave enough wire at the battery location to wire to the battery, strip back approximately 4 inches of the black tubing to expose the red/black wires inside. Strip back 1/4"-1/2" of wire to make your connections.



B. Crimp the supplied fuse holder onto the end of the RED wire and attach to the battery "+" terminal.

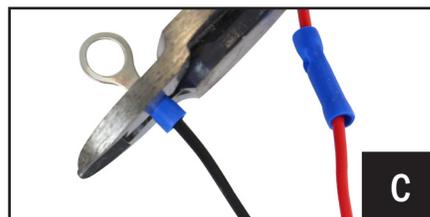

C. Crimp the supplied ring terminal to the BLACK wire and attach to the battery "-" terminal.



WP3-PN304A